 
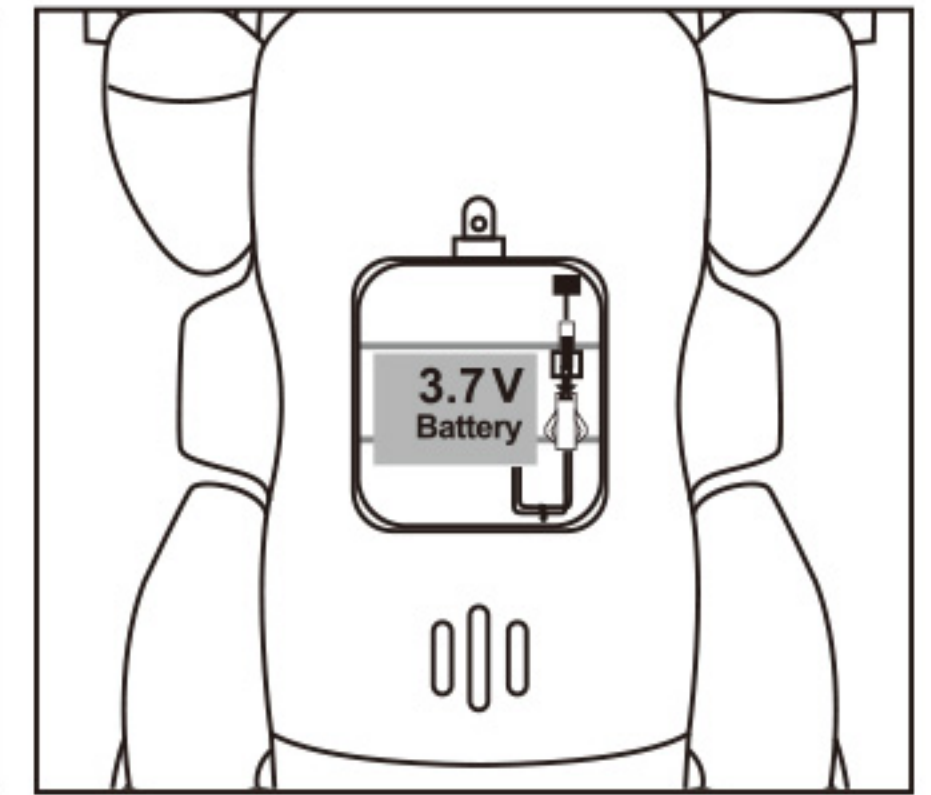 



Keep this instruction sheet for future reference, as it contains important information.
Adult supervision required . Contains small pieces.

WARNING: All instructions and warnings must be strictly observed. Improper disposes to polymer batteries may lead to:


- 1.Fire accidents, physical injuries or property loss.
- 2.Do not handle charger or lithium battery by yourself, otherwise you need to take all relevant risks.
- 3.At any time, if the battery starts to bulge, stop using it immediately. If a bulging battery is used during charging or discharge, it may cause a fire accident.
- 4.Store the batteries in warm and dry places.
- 5.During transporting, batteries need to be temporarily stored in a temperature range of 40-120 centigrade, and do not store inside models or put it under direct sunlight. Otherwise, it may cause battery damage, even a fire accident.
- 6.Do not use other types chargers. An inconpatible charge may cause a fire accident, personal injuries or property loss.
- 7.Do not operate your equipment when the battery voltage is too low.
- 8.Please stay away from all chemicals.
- 9.Avoid contact with water, especially when the device is designed without waterproof function. Water vapor can also cause damage to electronic products.

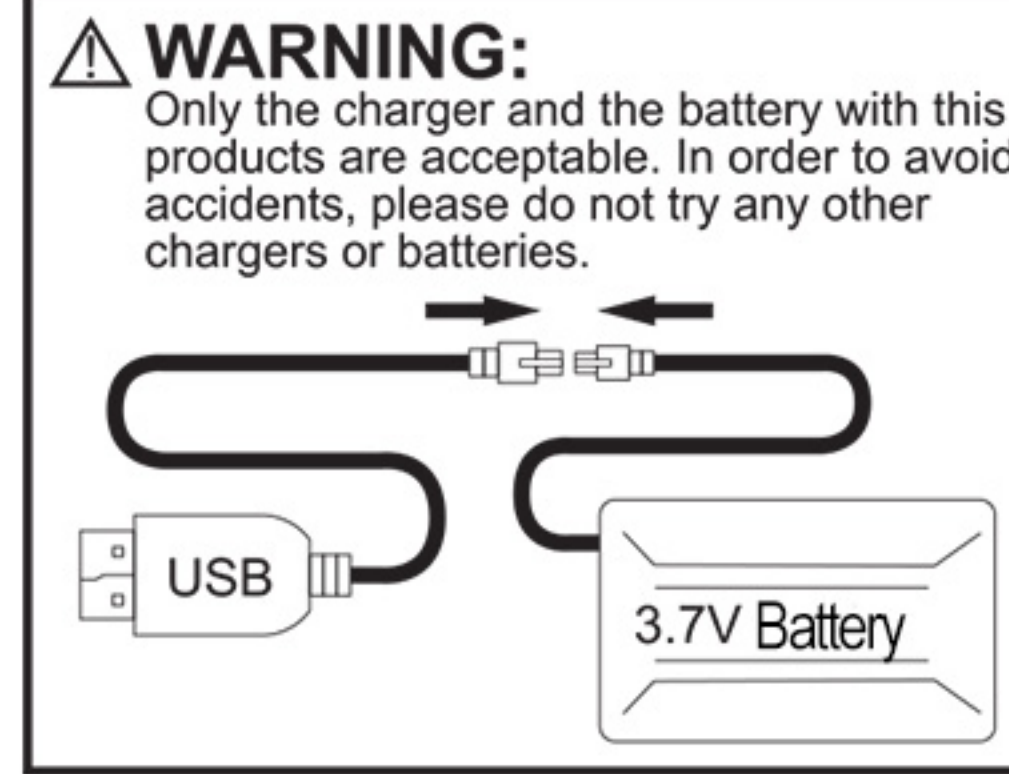

 Charge time for batteries: 4 hours. To install charged battery: Use phillips screwdriver to open battery compartment and connect battery to unit.

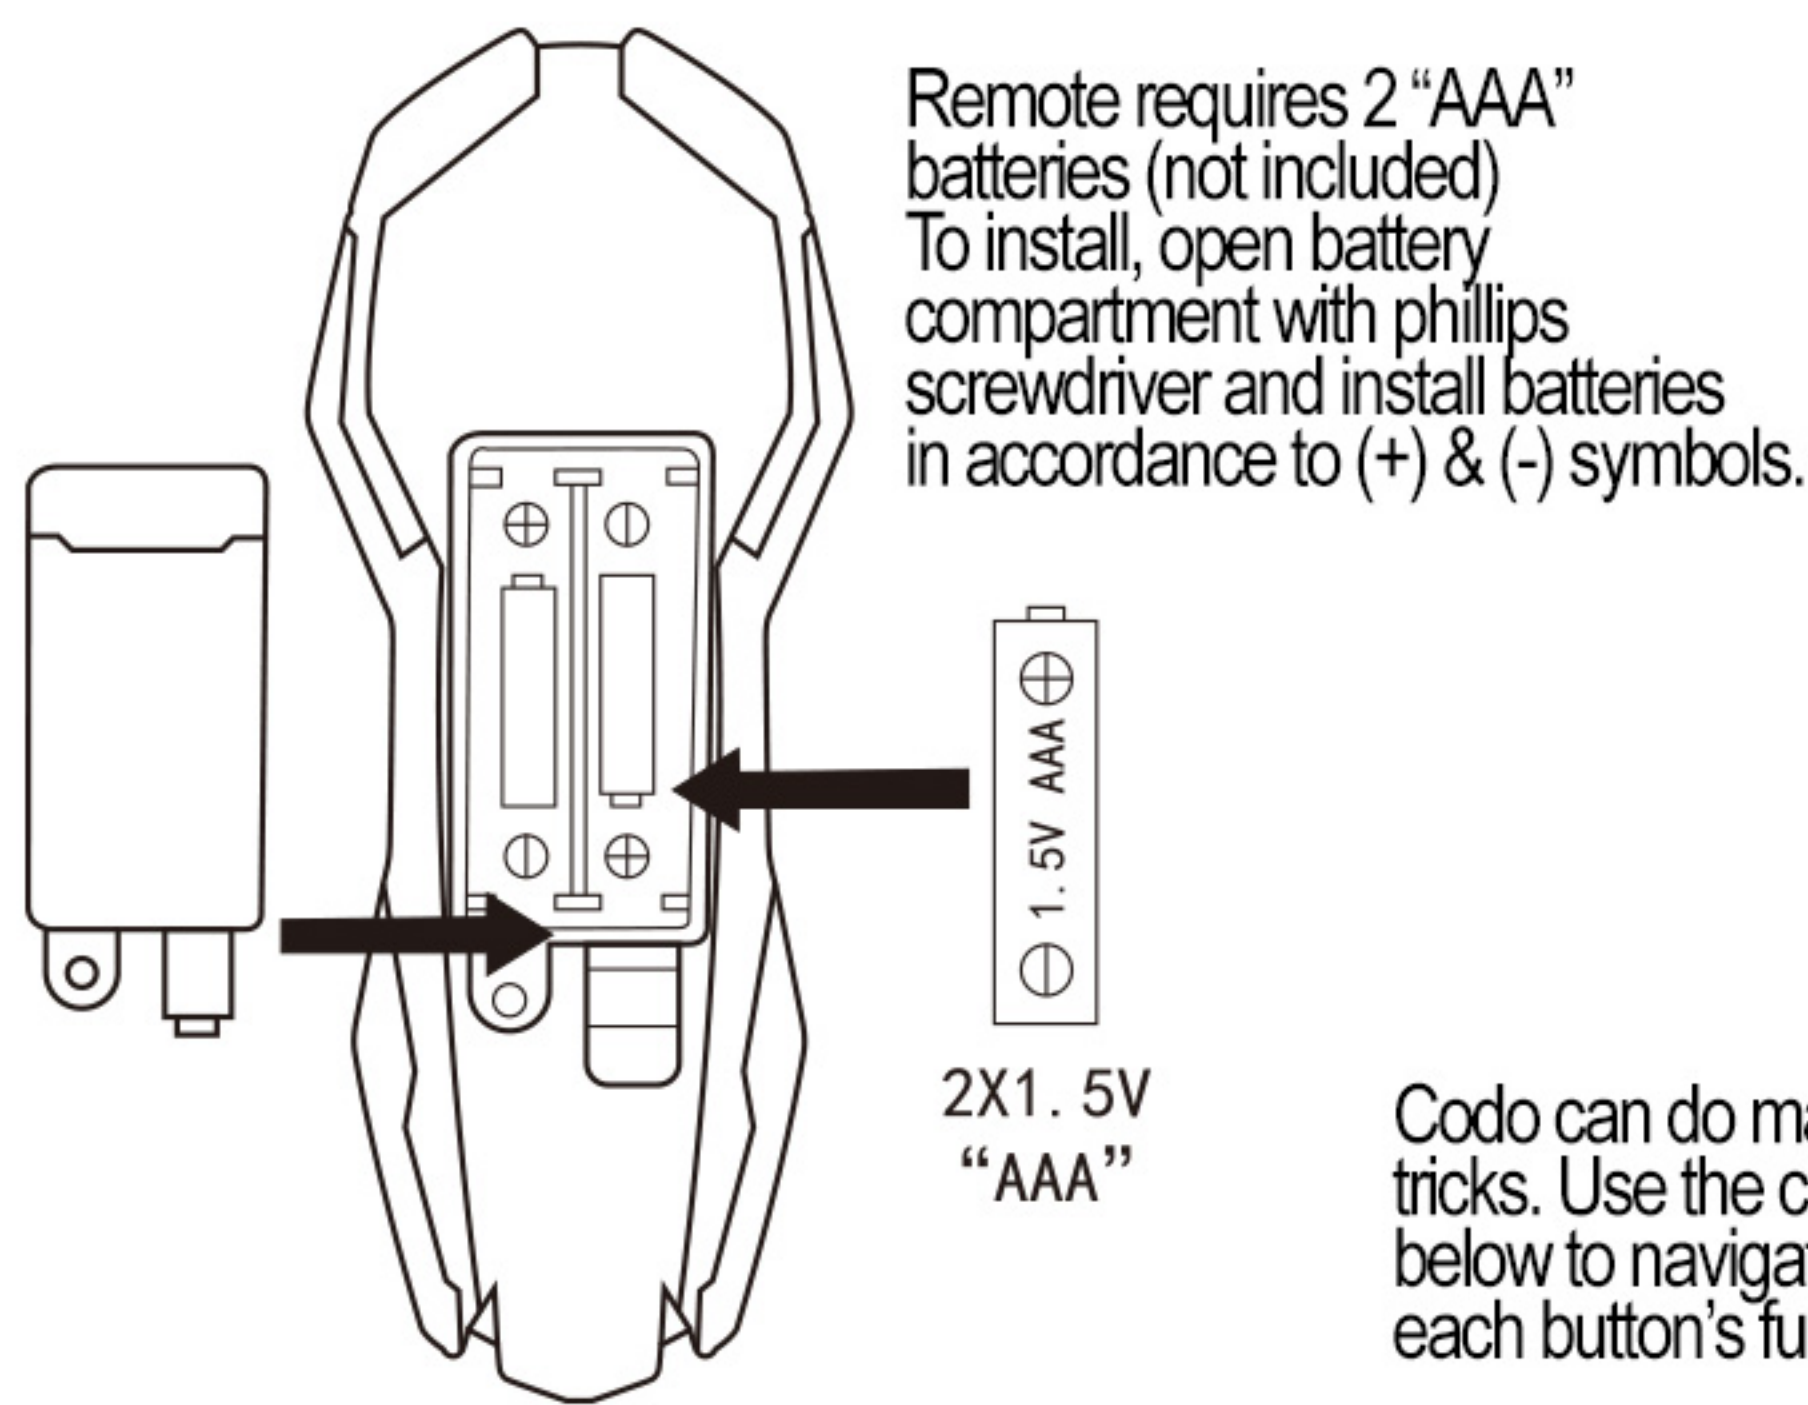

Codo can do many tricks. Use the chart below to navigate each button's function.

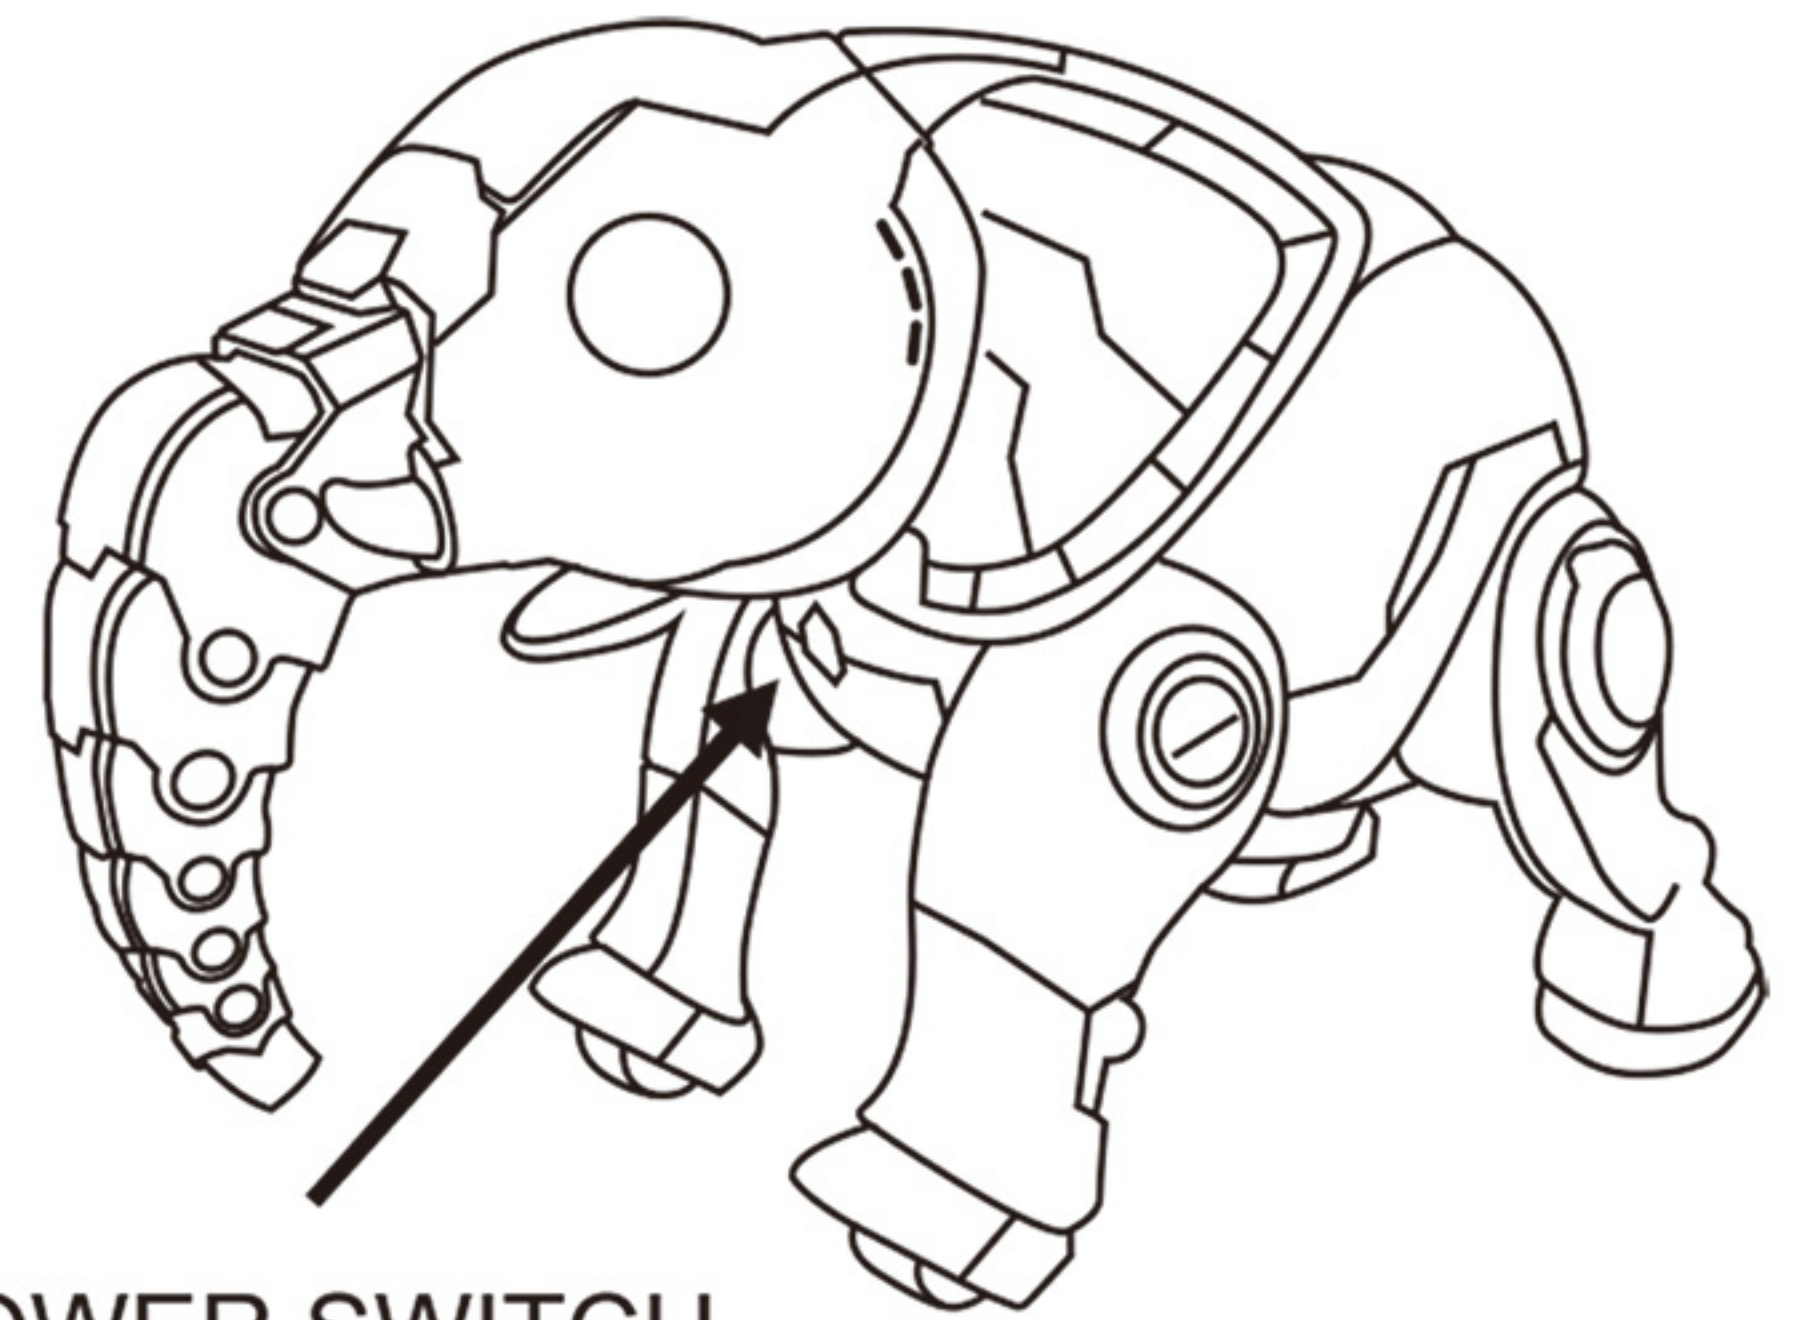

POWER SWITCH

CONTROL BUTTONS:



ADVANCE:
Codo will take a step forward.



STOP:
Codo will stop his current action. Use this button to stop voice command feature.



DEMO MODE:
Codo will perform a pre-programmed routine showcasing all of his tricks.



PROGRAMMING:

1. Codo can do a sequence of tricks. Press the programming button.
2. Press up to 5 of Codo's tricks in the order you want him to perform.
3. Once you selected the sequence, press the programming button again.
4. Codo will perform the tricks you selected in the order you programmed.
5. You can hit the STOP button at any time to pause and reset.



STAND:
Codo will stand on his four legs.



TRUNK UP:
Codo will move his trunk up.



TRUNK DOWN:
Codo will move his trunk down.



LAY DOWN:
Codo will lay down stretching his legs out.



HAND STAND:
Codo will stand on his front two legs and head.



PUSH UPS:
Codo will get down and do 3 push ups.



RING TOSS:
Codo will sit and begin to raise and lower his trunk so you can throw rings and try to have him catch them.



SIT DOWN:
Codo will sit on his back legs.



SAY HELLO:
Codo will sit and move his head and trunk as to say hello.



VOICE COMMANDS:

Codo recognizes seven voice commands. Press this button and speak one of the following commands loudly at Codo's head, and he will perform the trick.

"SING A SONG"
"SIT DOWN"
"HANDSTAND"
"PUSH UPS"

"SAY HELLO"
"STAND"
"LEAN OVER"
"STAND"



VOLUME CONTROL:
Turn volume up or down.



DANCE:
Codo has three pre-programmed dance routines. You can hit the stop button to pause.

